
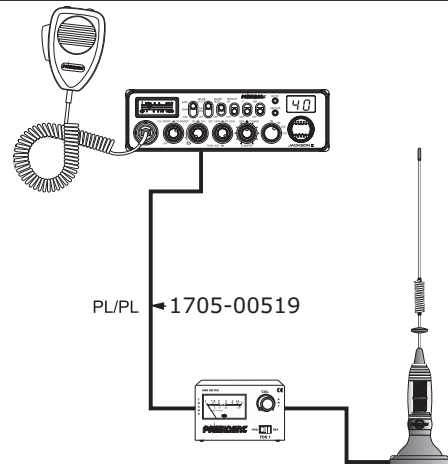


PRESIDENT

SWR-mittari 1705-00517

Käyttöohjeet

Lue nämä ohjeet huolellisesti ennen SWR mittarin käyttöä
-Säilytä ohje myöhempää käyttöä varten-

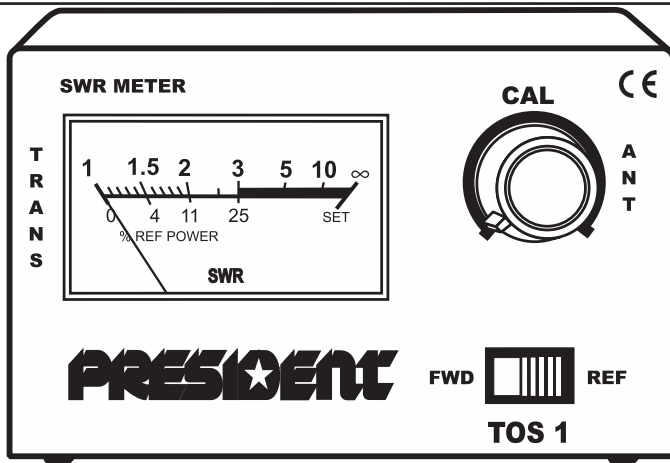

1705-00517

Tekniset tiedot

Impedanssi	50 Ω
Tarkkuus	+/- 5%
Taajuus	27 MHz

Asennus- ja säätöohjeet

- Asenna antenni ja kytke SWR-mittari, kuten kuvassa yllä. Tee seuraavat säädöt lähettimelle; Aseta radio kanavalle 20.
1. Aseta SWR-mittarin asetusnappi asentoon forward (FWD). Paina lähetyspainike pohjaan ja Kierrä CAL -säätönappia kunnes mittarin viisari on asteikon päässä (SET).
 2. Aseta SWR-mittarin asetusnappi asentoon (REF). Paina mikrofonin lähetysnappi pohjaan ja säädä antennin pituus
 3. minimiin.
 4. Tarkasta SWR-arvo (Standing Wave Ratio) toistamalla kohta 1, käännä sitten asetusnappi asentoon REF ja mittari näyttää suoraan SWR arvon. SWR-arvon pitäisi olla 2 tai sen alle. Korkea SWR lukema, 3 tai enemmän voi aiheuttaa vakavan vaurion radiolle. SWR-mittarin voi jättää paikoilleen. Jos se poistetaan, kytke antennikaapeli suoraan lähettimeen.

DECLARATION OF CE CONFORMITY

Description : **SWR METER**

Brand : **PRESIDENT**

Type : **SWR 1**

This product is in conformity with the Directive 89 336/CEE.

For a normal use, respecting the user manual instructions, as well as the length of cables under 3 m, the above-mentioned specifications of the product are in conformity with following standards:

EN 50081-1 / EN 50082-1