

Scania R&S 2017- (low&medium)

Art. 864670

Kaitseraud OUTLAND | Cattleguard OUTLAND | LKW Bullfänger OUTLAND




- | | |
|--|----|
| 1. Kaitseraud / cattleguard / Bullfänger | 1 |
| 2. Kronstein / bracket / Konsole | 2 |
| 3. Kronstein / bracket / Konsole | 1 |
| 4. Kronstein / bracket / Konsole | 1 |
| 5. Kronstein / bracket / Konsole | 2 |
| 6. Kronstein / bracket / Konsole | 2 |
| 7. Kronstein / bracket / Konsole | 2 |
| 8. Puks / bushing / Buchse | 2 |
| 9. Kronstein / bracket / Konsole | 2 |
| 10. Kronstein / bracket / Konsole | 1 |
| 11. Kronstein / bracket / Konsole | 1 |
| 12. Laternaalus / lamp fixing bracket / Lampenbefestigung sklammer | 4 |
| 13. Pinguti võti / tensioner key / Spannschlüssel | 1 |
| 14. Liblikpolt / butterfly bolt / Schmetterling Bolzen M5x10 | 2 |
| 15. Polt / bolt / Bolzen M6x16 DIN7380-A2 | 2 |
| 16. Polt / bolt / Bolzen M8x25 DIN933-A2 | 8 |
| 17. Polt / bolt / Bolzen M10x30 DIN933-A2 | 6 |
| 18. Polt / bolt / Bolzen M10x70 DIN933-galZn | 2 |
| 19. Polt / bolt / Bolzen M12x120 DIN933-A4 | 2 |
| 20. Polt / bolt / Bolzen M20x40 DIN933-galZn | 2 |
| 21. Polt / bolt / Bolzen M20x170 DIN912-galZn | 2 |
| 22. Polt / bolt / Bolzen M20x220 DIN912-galZn | 2 |
| 23. Mutter / nut / Mutter M6 DIN985-A2 | 2 |
| 24. Mutter / nut / Mutter M10 DIN934-A2 | 10 |
| 25. Seib / flat washer / Scheibe 5,3x10x1 | 2 |
| 26. Seib / flat washer / Scheibe 6,4x18x1,6 | 4 |
| 27. Seib / flat washer / Scheibe 8,4x16x1,6 | 4 |
| 28. Seib / flat washer / Scheibe 10,5x24x2 | 16 |
| 29. Seib / flat washer / Scheibe 10,5x30x2,5 | 2 |
| 30. Seib / flat washer / Scheibe 13x24x2,5 | 2 |
| 31. Seib / flat washer / Scheibe 20x37x3 | 2 |
| 32. Vedruseib / spring washer / Federnscheibe A5 | 2 |
| 33. Vedruseib / spring washer / Federnscheibe A8 | 8 |
| 34. Vedruseib / spring washer / Federnscheibe A10 | 12 |
| 35. Vedruseib / spring washer / Federnscheibe A12 | 2 |
| 36. Vedruseib / spring washer / Federnscheibe A20 | 2 |

A2 / A4

M5	-	4,1 Nm
M6	-	7 Nm
M8	-	17 Nm
M10	-	33 Nm
M12	-	57 Nm

Zn

M10	-	47 Nm
M20	-	385 Nm

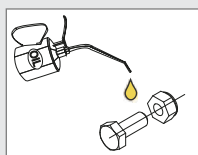

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.









Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.





Kaal / Weight / Gewicht: 76,5 kg








Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Einbauzeit ohne elektrische arbeit: 60 min






Vajalikud tööriistad / Required Tools / Benötigte Werkzeuge



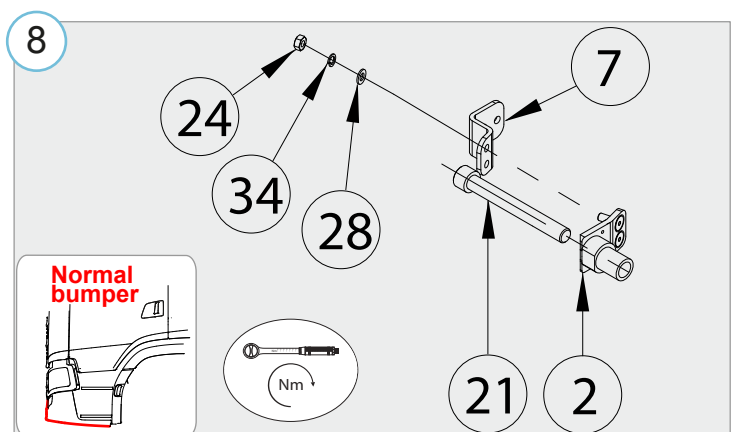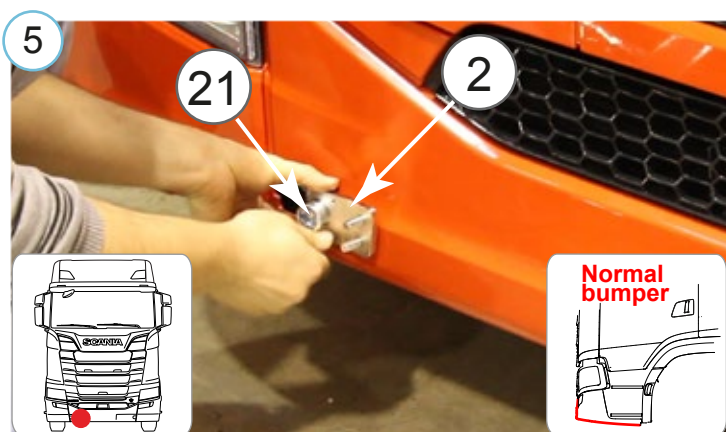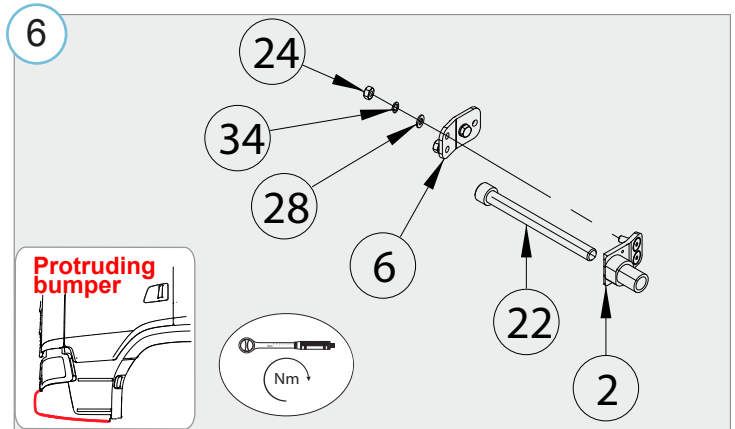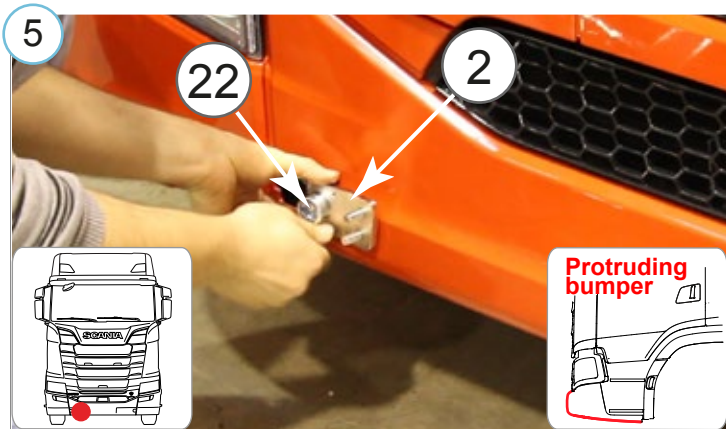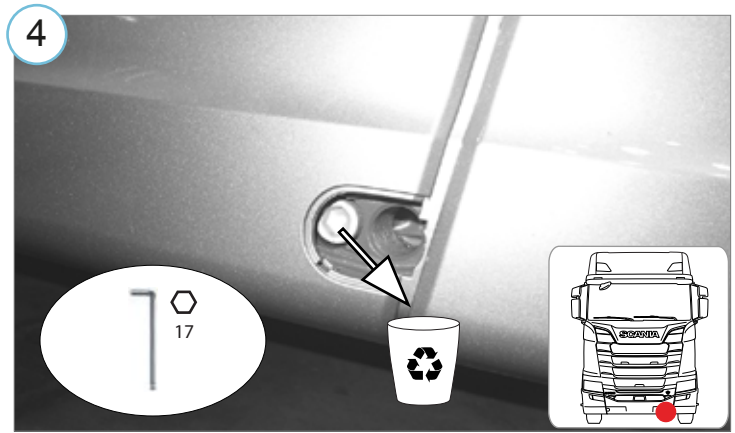
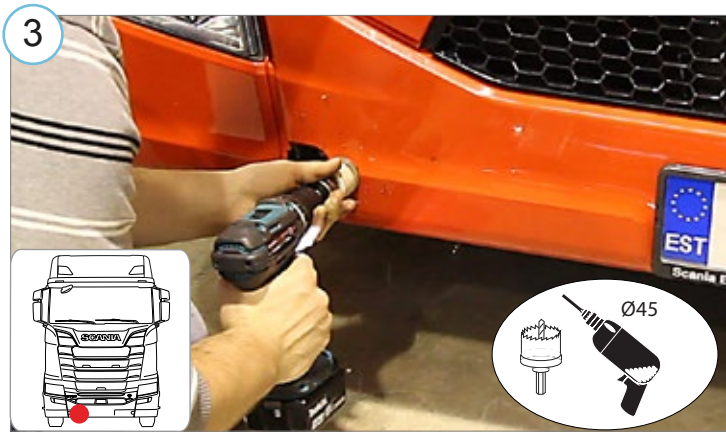
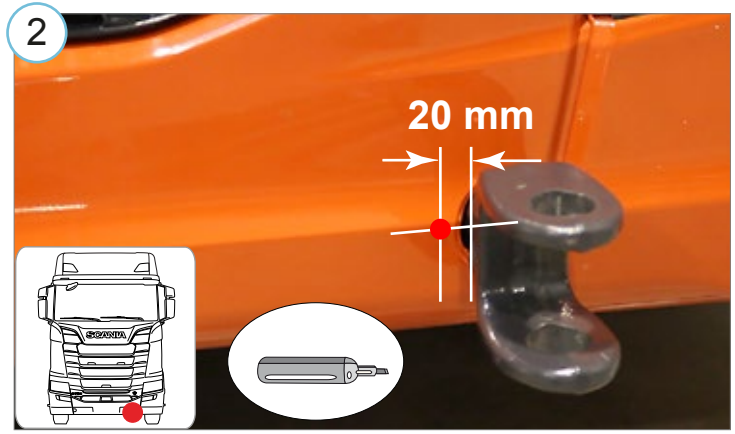
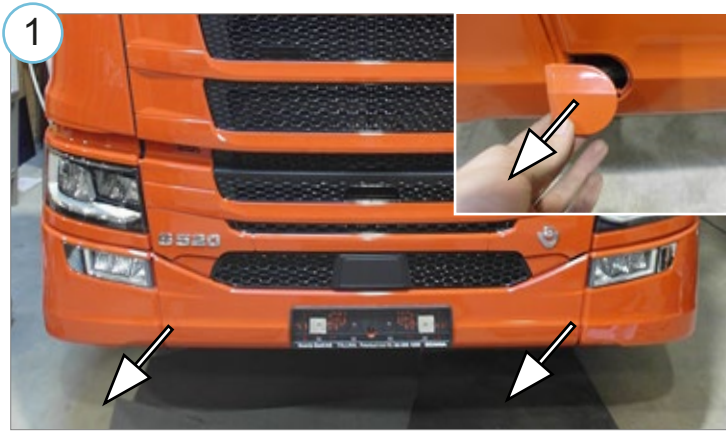


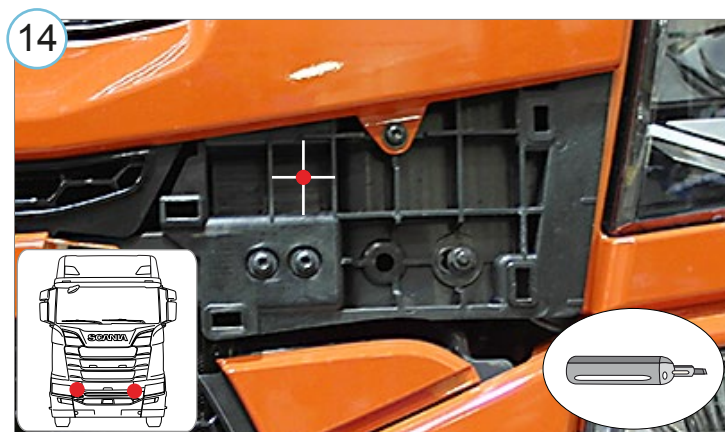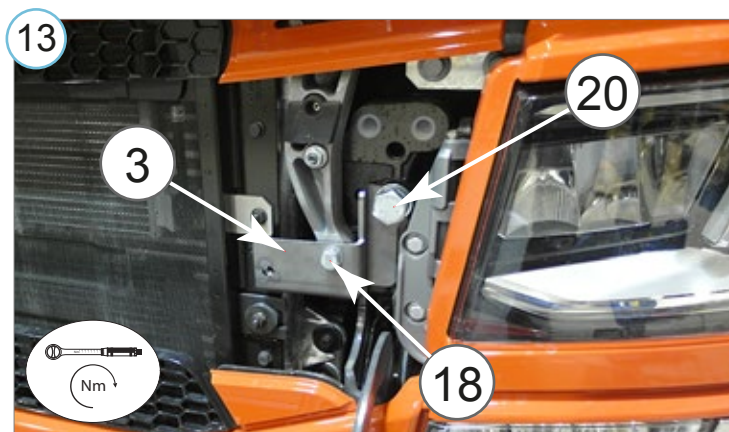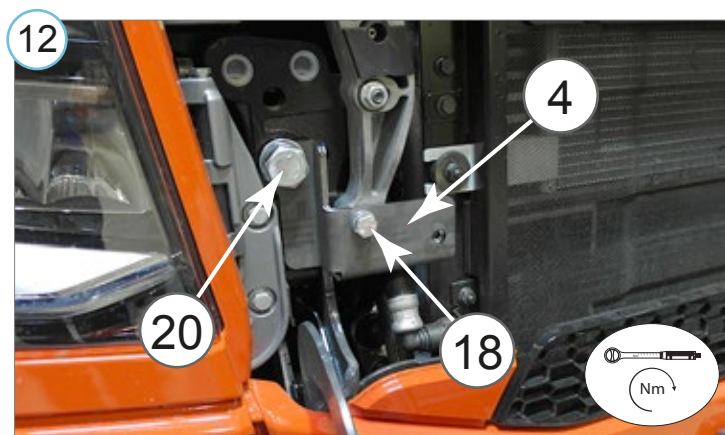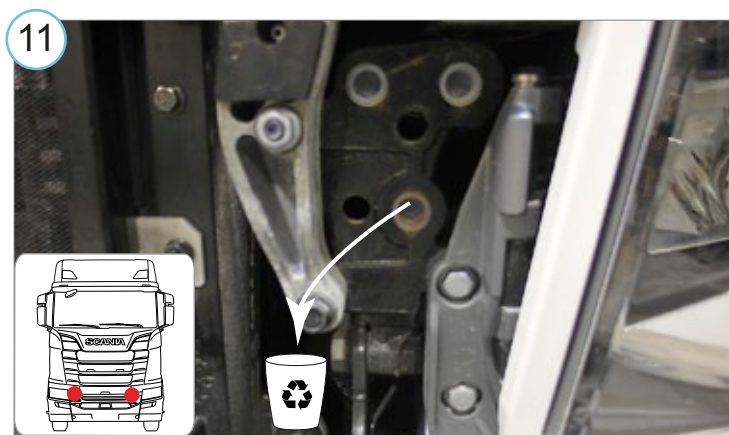

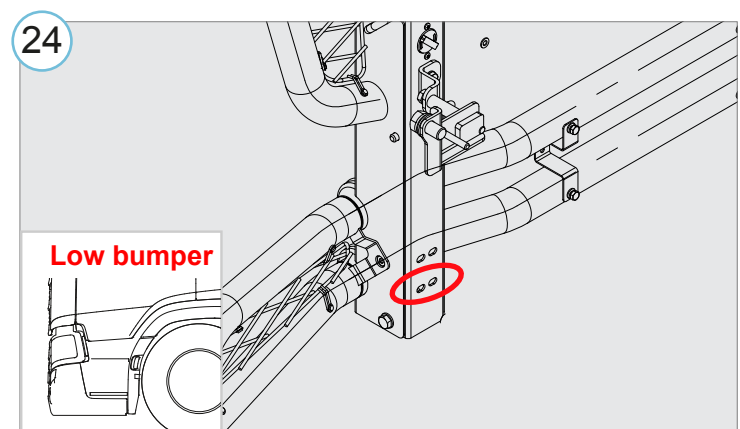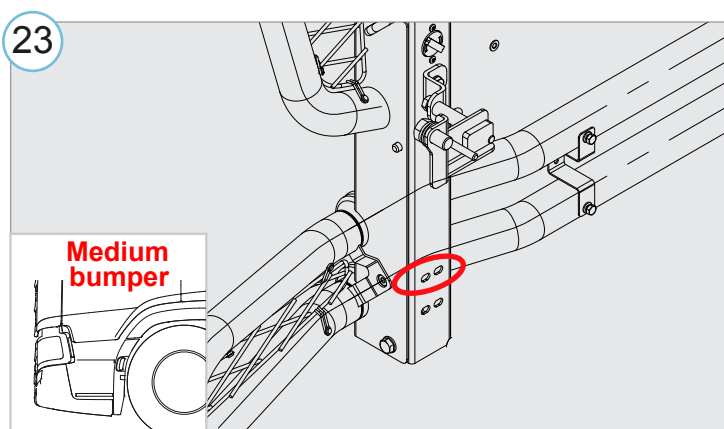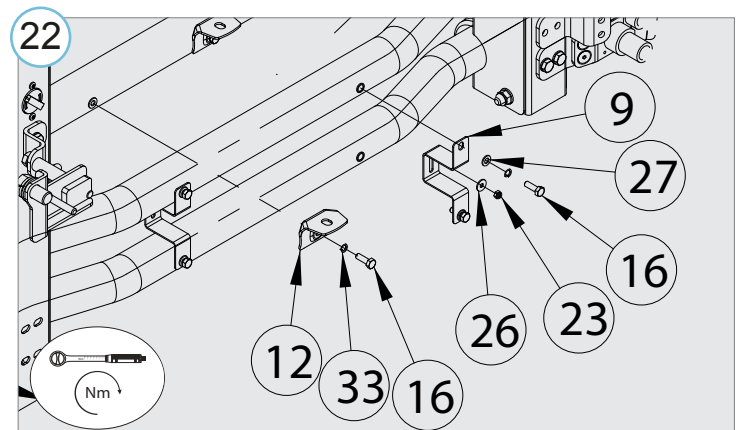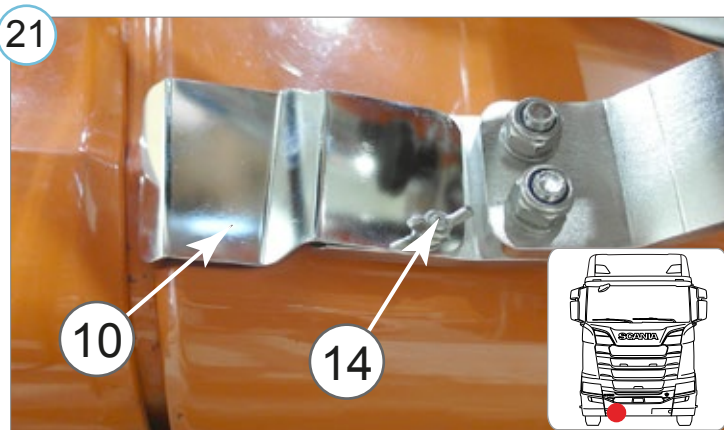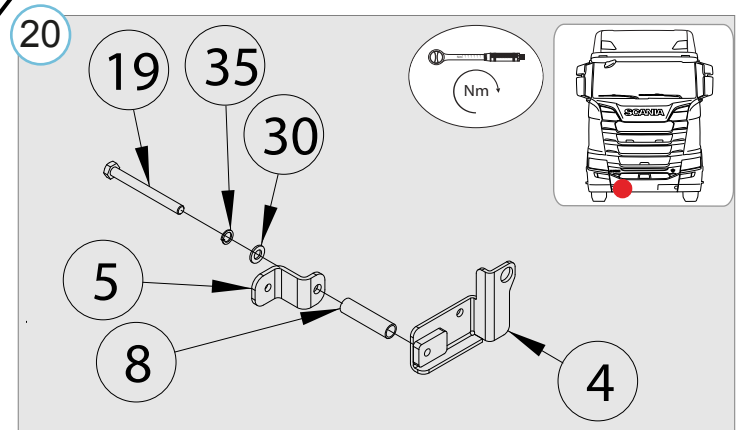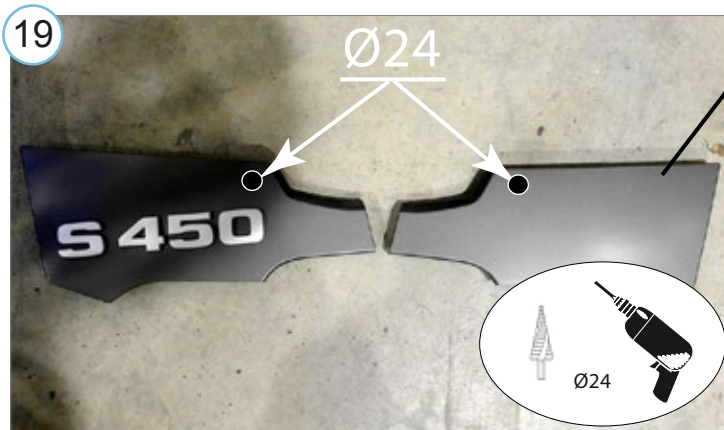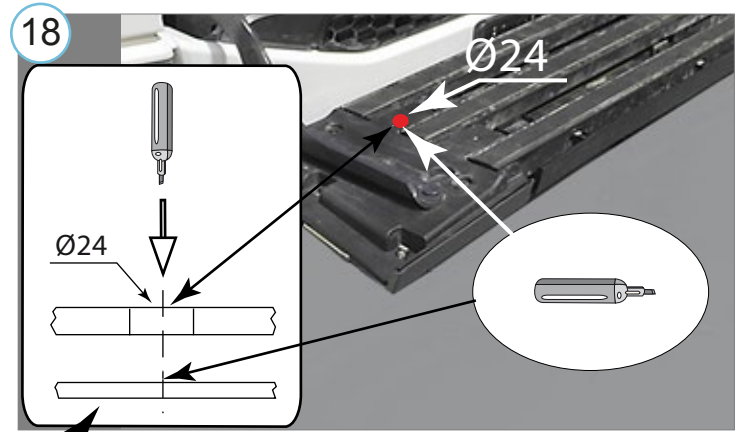

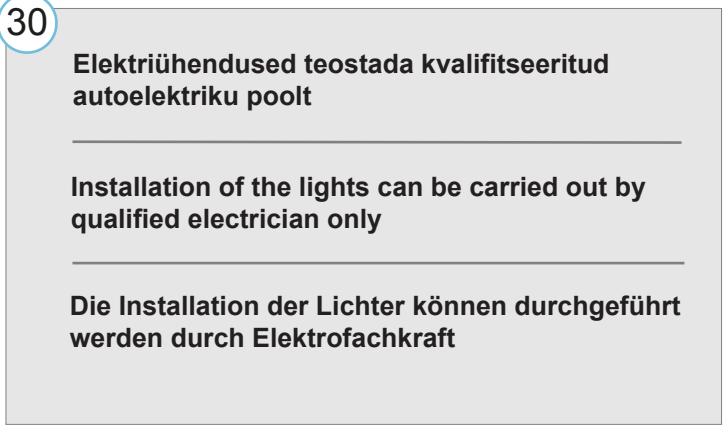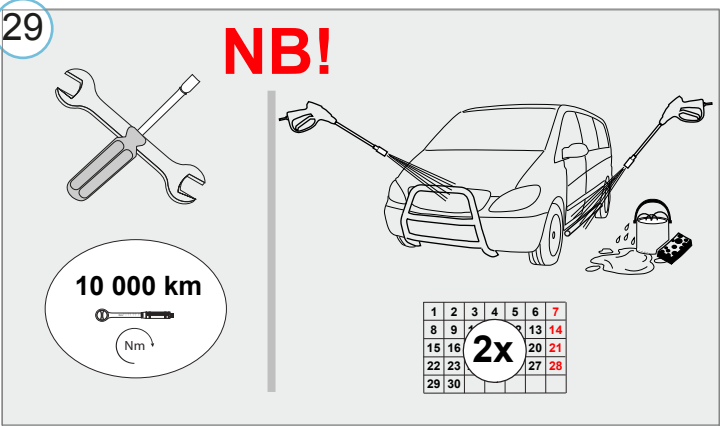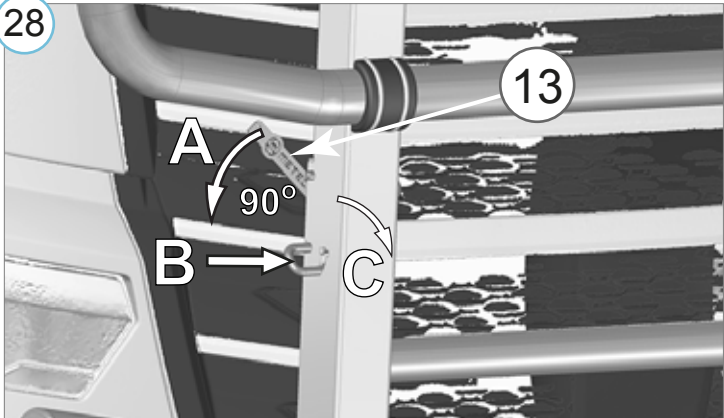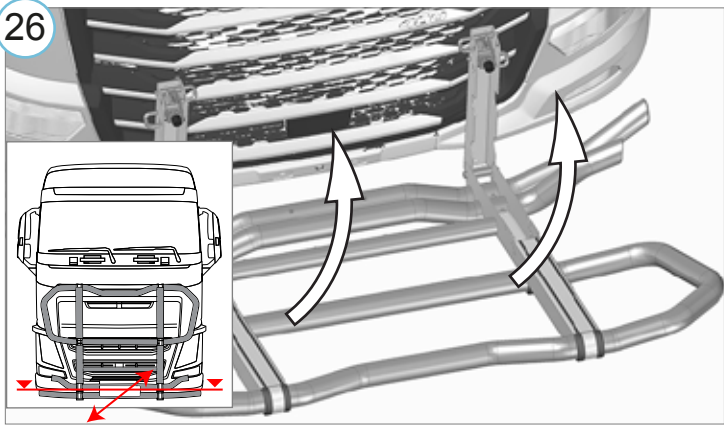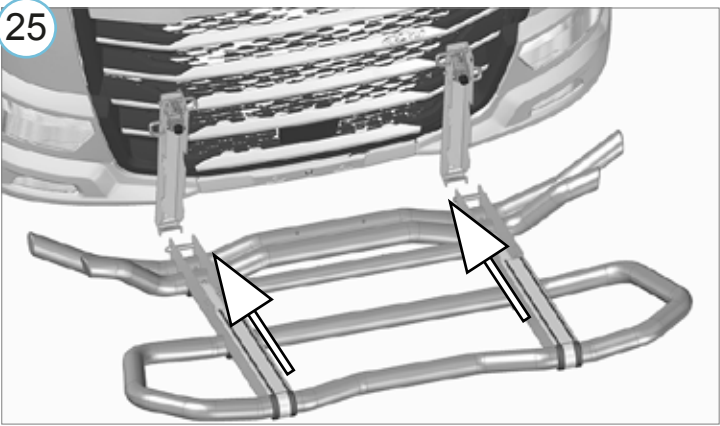

Kaitseraia eemaldamine / Removing the cattleguard / Entfernen der LKW Bullfänger

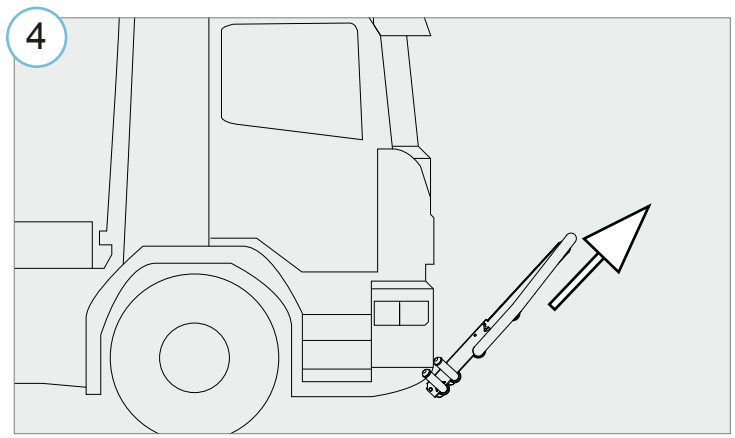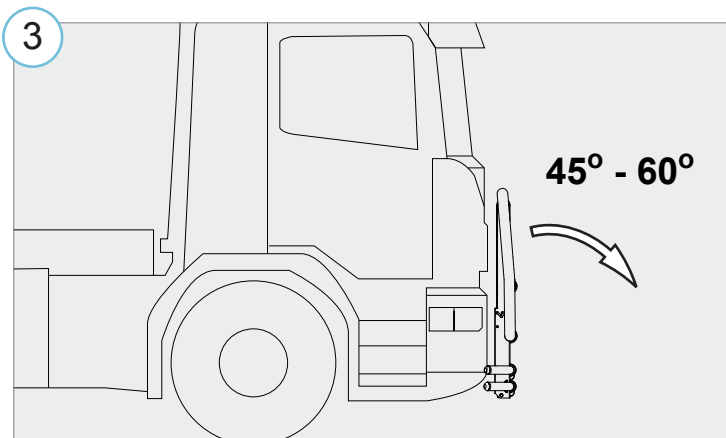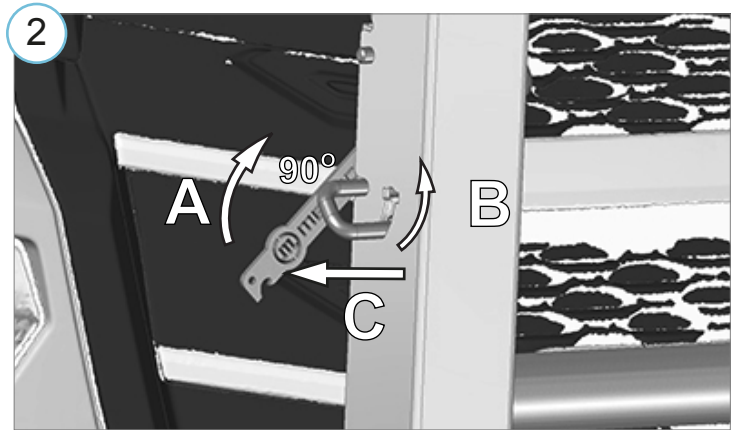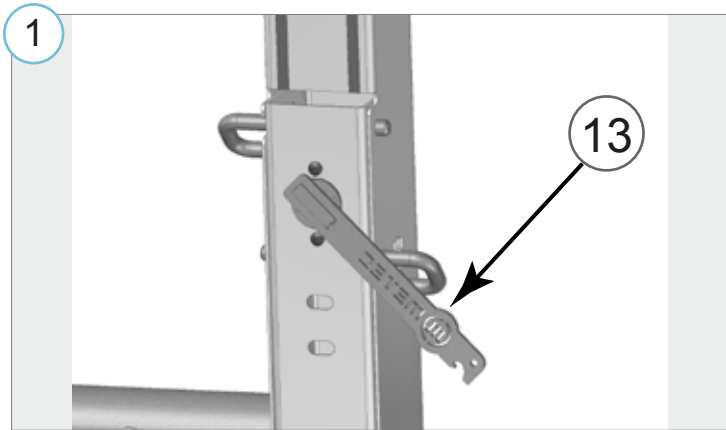

Lisa / extra / Extra

