




Mitsubishi L200 2015-2019; 2019-

Art. 821080


Kastikaared | Overrolls | Верхняя дуга пикапа | Kistenbügel



- | | |
|---|---|
| 1. Kastikaar (eesmine) / overroll (front) / верхняя дуга (передний) / Kistenbühel (vorderseite) | 1 |
| 2. Kastikaar (tagumine) / overroll (rear) / верхняя дуга (задний) / Kistenbügel (rückseite) | 1 |
| 3. Vinkel / angled plate / угольник / Winkel | 2 |
| 4. Otsakate / cover / крышка / Decke | 4 |
| 5. Kompensaator / compensator / компенсатор / Kompensator | 6 |
| 6. Polt / bolt / болт / Bolzen M8x25 | 4 |
| 7. Polt / bolt / болт / Bolzen M10x30 | 6 |
| 8. Tõmbemutter / rivet nut / тяговая гайка / Nietmutter M8x11x16 | 6 |
| 9. Mutter / nut / гайка / Mutter M10 | 2 |
| 10. Seib / washer / шайба / Scheibe 8,4x16x1,6 | 4 |
| 11. Seib / washer / шайба / Scheibe 10,5x20x2 | 8 |
| 12. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 6 |
| 13. Vedruseib / spring washer / пружинная шайба / Federnscheibe A10 | 4 |
| 14. Vinkel / angled plate / угольник / Winkel | 1 |
| 15. Vinkel / angled plate / угольник / Winkel | 1 |
| 16. Seib / washer / шайба / Scheibe 8,4x24x2 | 2 |

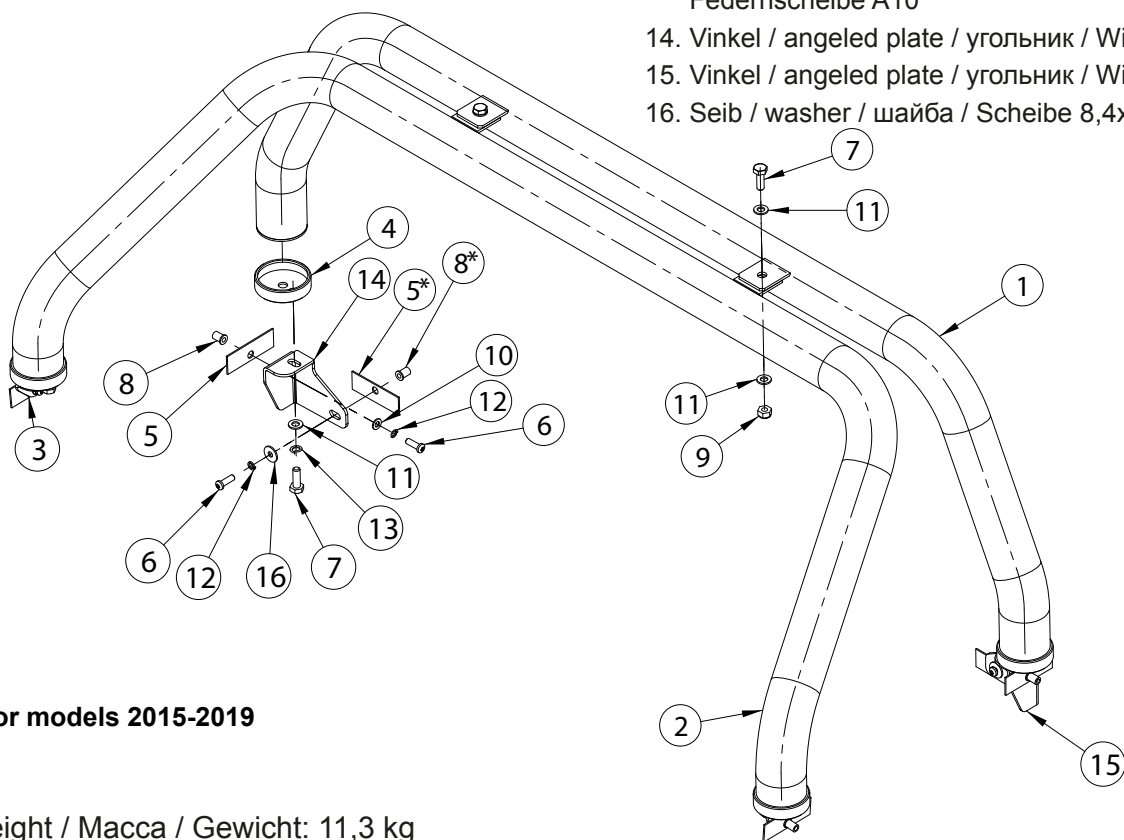

M8 - 25Nm
M10 - 50Nm

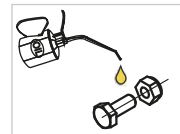

* - Only for models 2015-2019

Kaal / Weight / Масса / Gewicht: 11,3 kg

Paigaldusaeg / Time of mounting / Время установки / Einbauzeit: 45 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



