


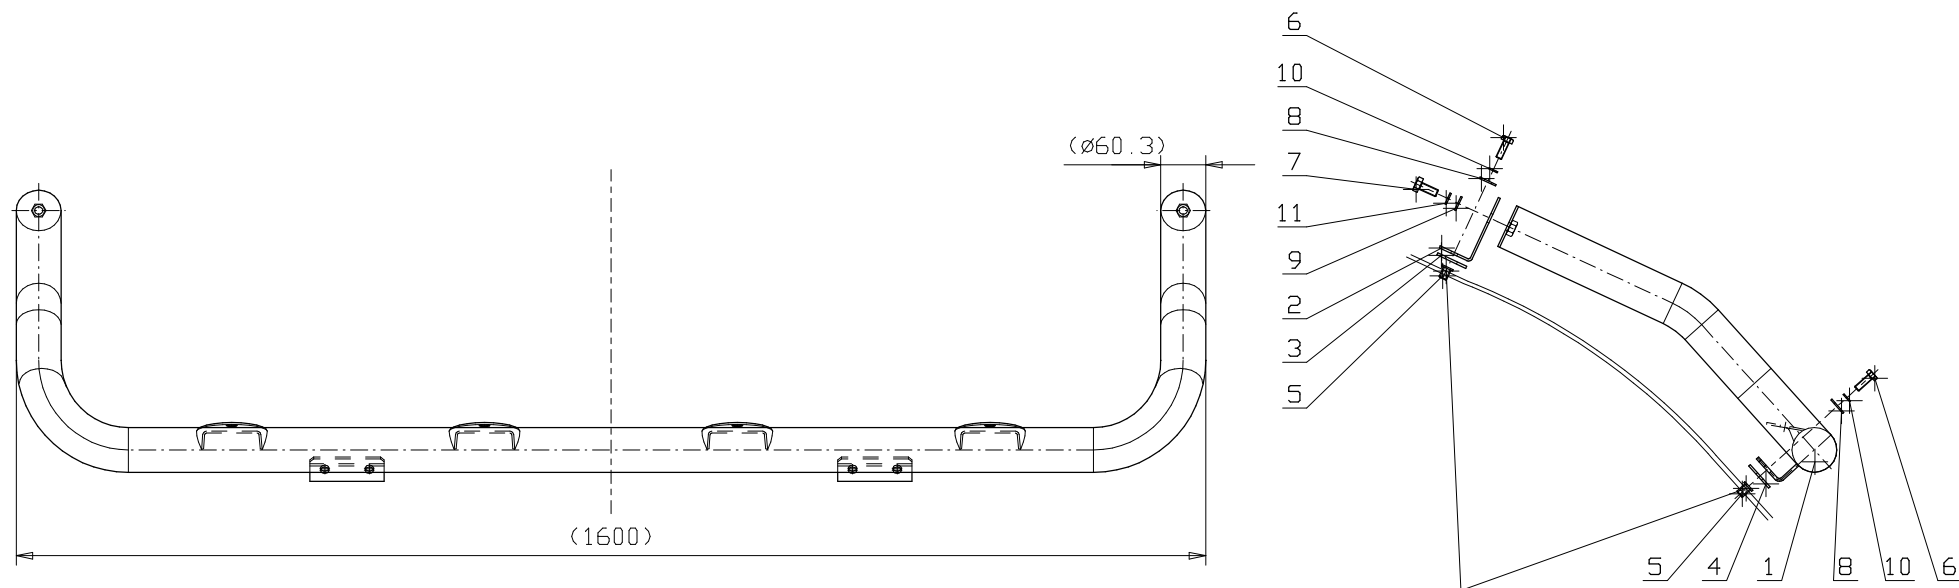

IVECO STRALIS AT (852340)

Märgi ja puuri 6 ava d=13mm läbi katuse.
 Kata puuritud kohad silikaaniga.
 Paigalda tõmbemutrid MB.
 Paigalda laternakandur.

Mark and drill 6 holes d=13 mm through the roof.
 Cover the drilled area with silicone.
 Mount blind rivet nuts MB.
 Mount the lampholder.

	Pcs.
1 - Laternakandur (lamp holder)	1
2 - Vinkel (bracket)	2
3 - Kompensaator (rubber) 60x43 mm	2
4 - Kompensaator (rubber) 100x40 mm	2
5 - Tõmbemutter (blind rivet nut) MB	6
6 - Polt (bolt) M8x30 mm	6
7 - Polt (bolt) M10x25 mm	2
8 - Seib (washer) 8.4x24x2 mm	6
9 - Seib (washer) 10.5x20x2 mm	2
10 - Vedruseib (spring washer) A8	6
11 - Vedruseib (spring washer) A10	2