




Renault Traffic / Opel Vivaro 2014-; 2019-

Art. 828441


Esistangekaitse | Cityguard | Передняя дуга | Cityguard



- | | |
|--|----|
| 1. Esistangekaitse / Cityguard / Передняя защита / Cityguard | 1 |
| 2. Kronstein / bracket / кронштейн / Konsole | 1 |
| 3. Kronstein / bracket / кронштейн / Konsole | 1 |
| 4. Kronstein / bracket / кронштейн / Konsole | 1 |
| 5. Kronstein / bracket / кронштейн / Konsole | 1 |
| 6. Polt / bolt / болт / Bolzen M8x30 | 4 |
| 7. Polt / bolt / болт / Bolzen M8x40 | 2 |
| 8. Seib / flat washer / шайба / Scheibe 8,4x24x2 | 12 |
| 9. Mutter / nut / гайка / Mutter M8 DIN985 | 4 |
| 10. Mutter / nut / гайка / Mutter M8 DIN934 | 2 |
| 11. Seib / flat washer / шайба / Scheibe 10,5x30x2,5 | 2 |

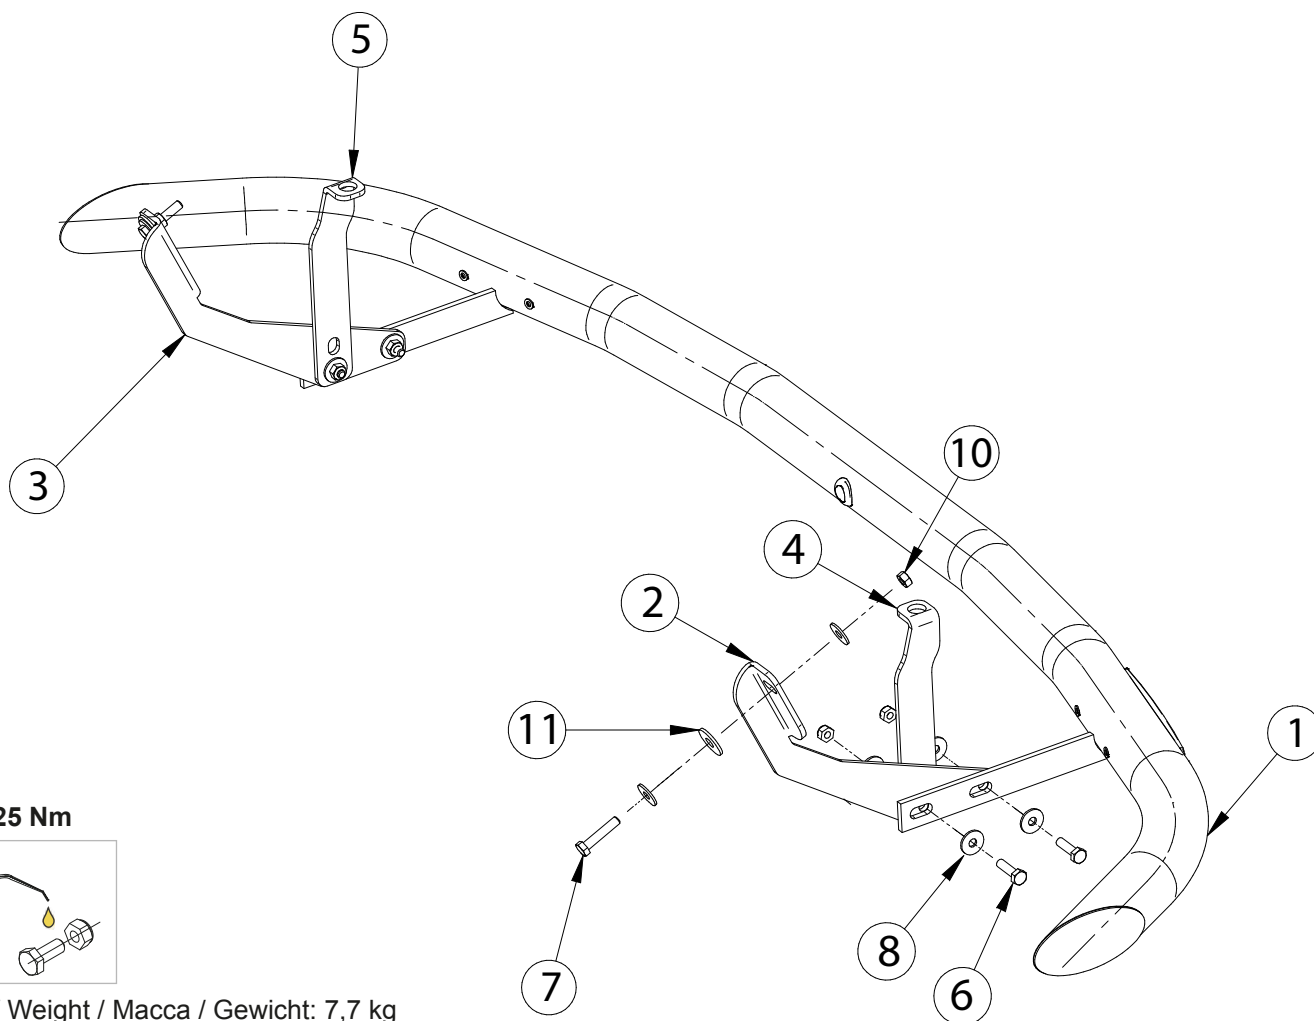

M8 - 25 Nm







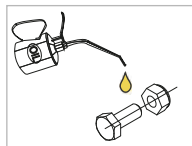




Kaal / Weight / Масса / Gewicht: 7,7 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 30 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



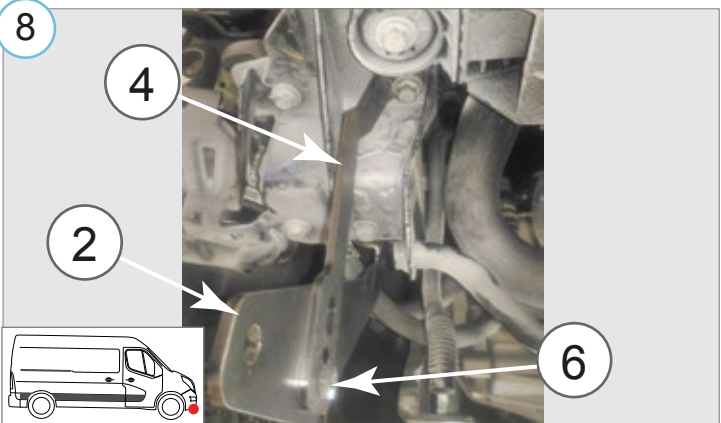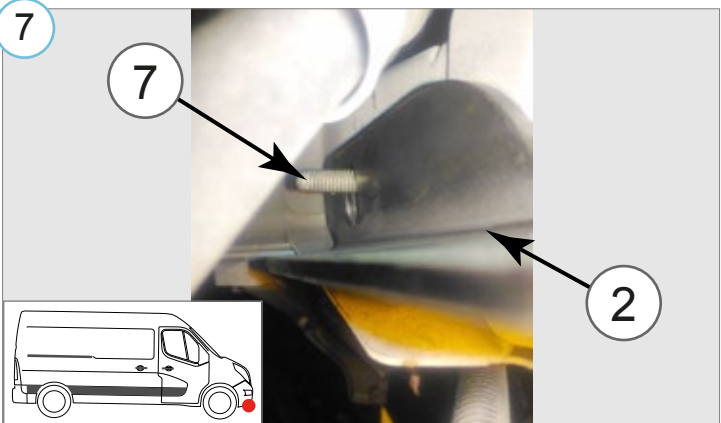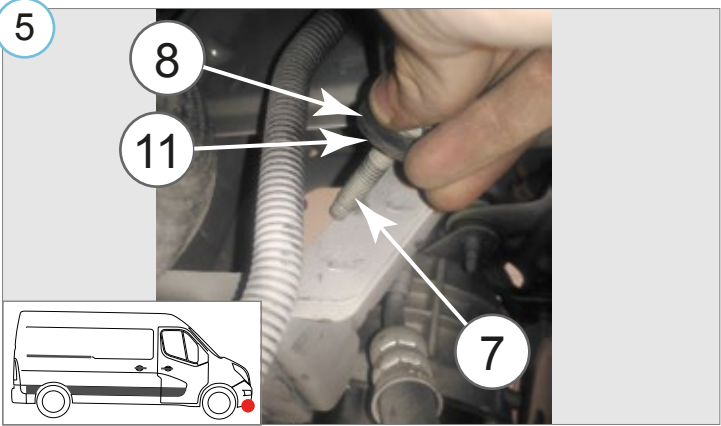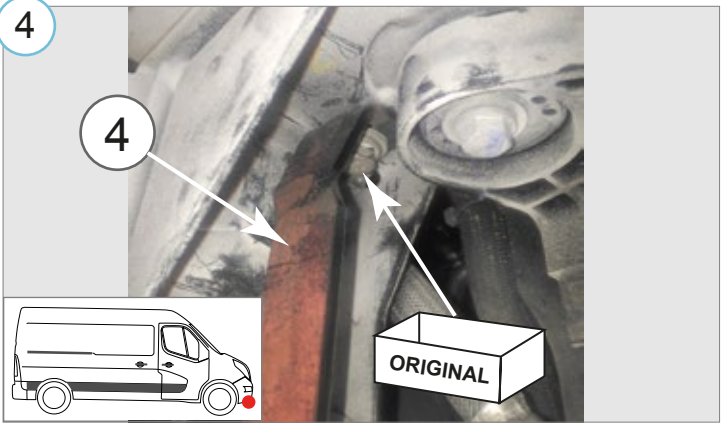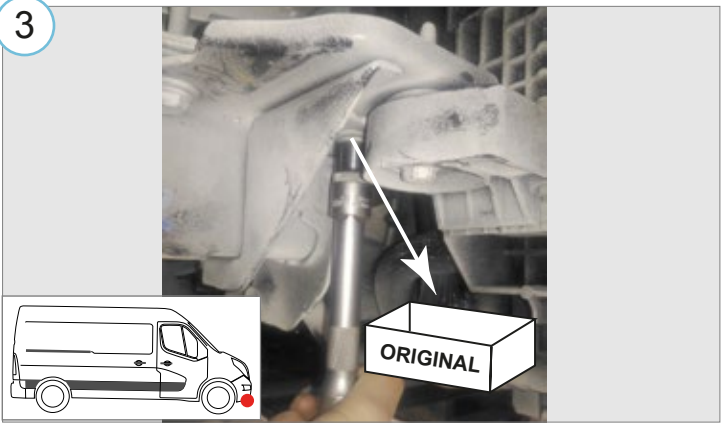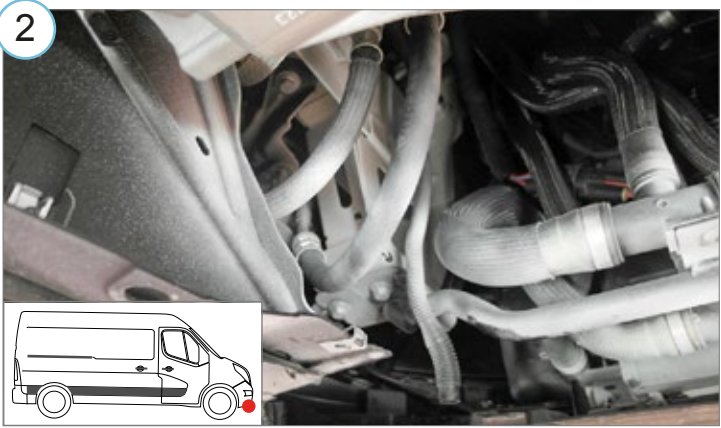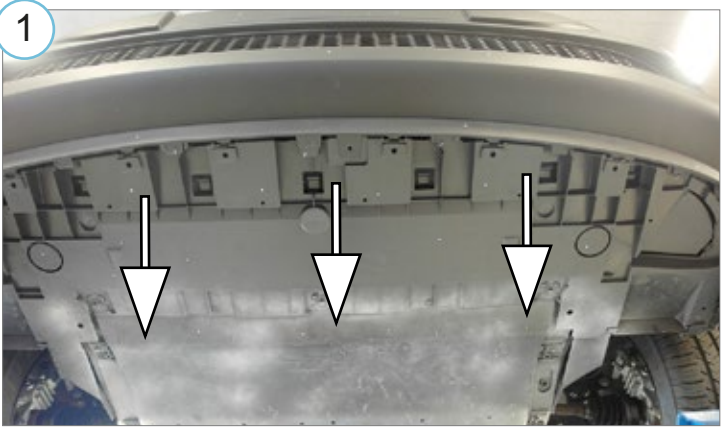

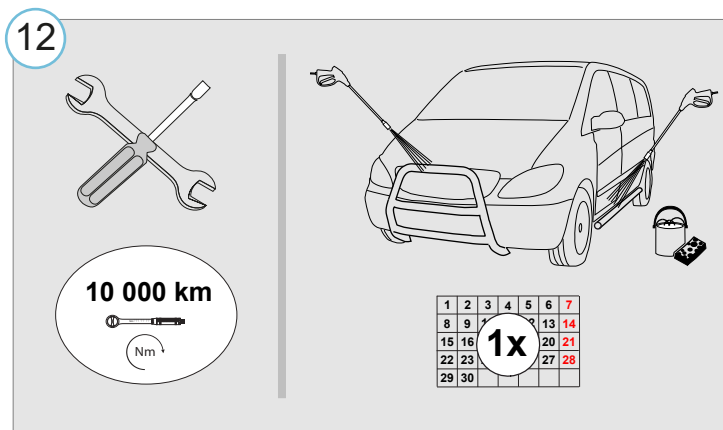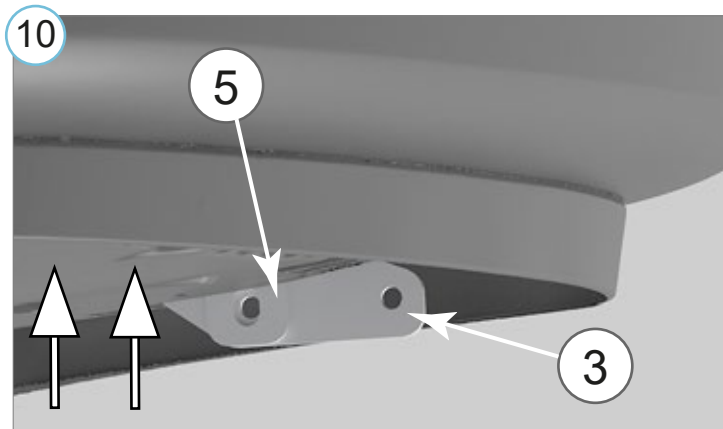

DLR päevasõidutulede elektriühendused teostada kvalifitseeritud autoelektriku poolt vastavalt tulede tootja paigaldusjuhendile

Installation of the DRL lights can be carried out by qualified electrician only, in accordance with the light manufacturer's instructions

Монтаж DRL огней может быть выполнено только квалифицированным электриком, в соответствии с инструкцией производителя.

Die Installation der DRL Lichter können durchgeführt werden durch Elektrofachkraft in Übereinstimmung mit Herstelleranweisung.